


## Assembly instructions

for Festival (6K) and Festival L (8K) summer houses and BBQ huts

***NB! On several occasions, the figures in the installation guide refer to the Festival L garden house, among other things, with regard to wall elements and slats.***

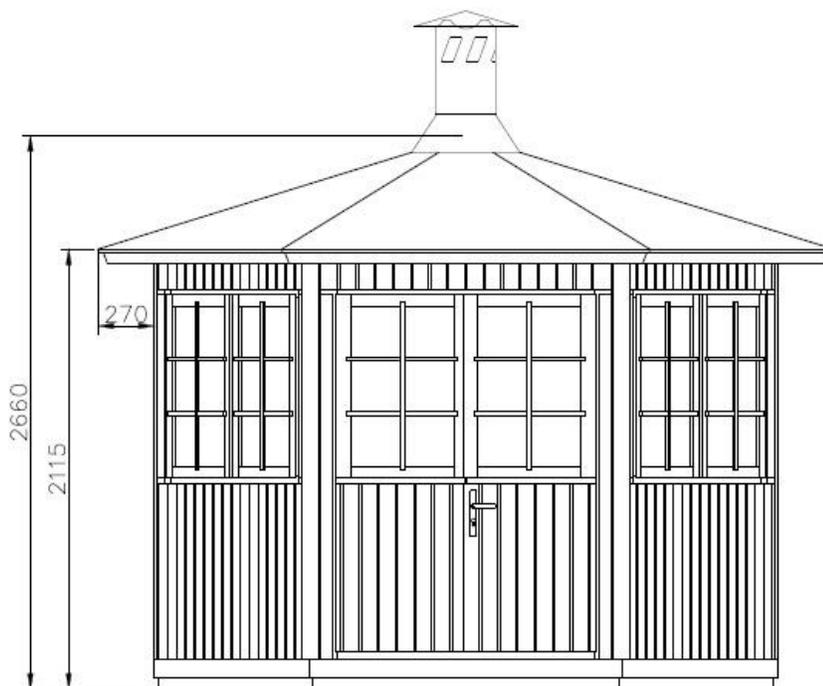

Tools necessary for instalment: Spirit level, hammer, knife, tape measure, screwdriver (e.g. power drill), crosshead drills No. 1, 2 and 3, 4 mm drill and 3 roof support beams (e.g. 50 x 50; for installing 6K, length 260 cm; and for installing 8K, length 265 cm), pillar anchors or concrete slates. These tools are not included in the set.

**Attention! The wooden structures have not been treated, therefore they need to be impregnated with a wood protection product both from the inside and the outside.**


### Preparing the base

Install 7 (6K) or 12 (8K) pillar anchors or concrete slates according to the pictures 1 and 2. Install the pillar anchors into the corners and the centre. To the centre of 8K, install 4 pillar anchors. The top surface of all base plates has to be at the same height.


NB! When measuring, consider the external measurements of the pillars so that these would be completely under the house. Leave a ventilation gap between the base structure and the ground.

If the ground is soft, it is necessary to dig holes under the foundation slates and fill these with sand, which is reinforced with water, for example, and pressed so tight that the pillars do not sink. The garden house may also be installed on a single base, e.g. a concrete slate, in such a case it is necessary to pay attention also to ventilation.

Picture 1

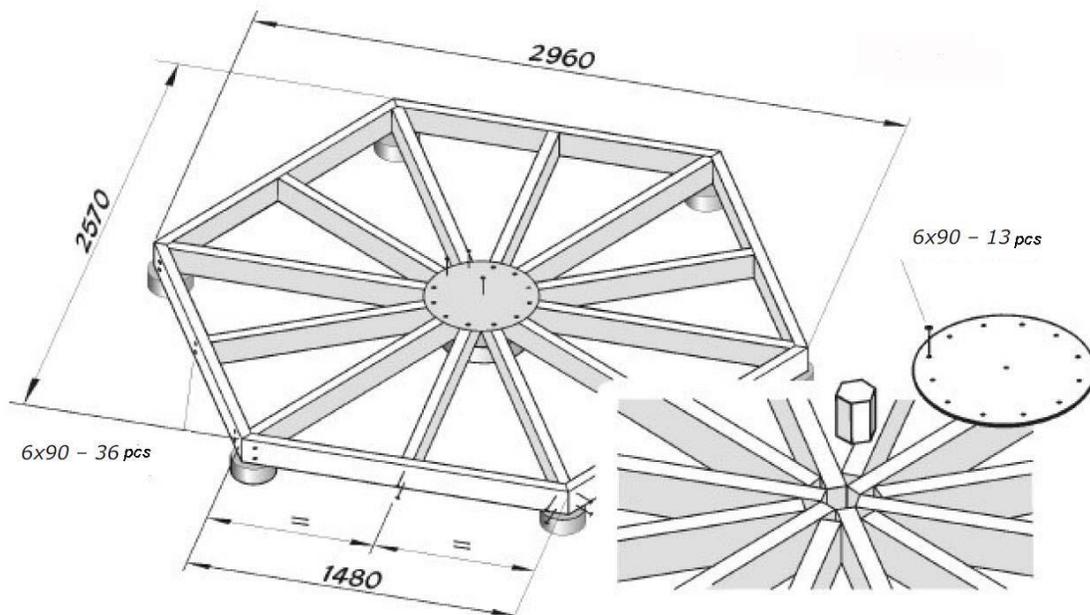

Picture 2

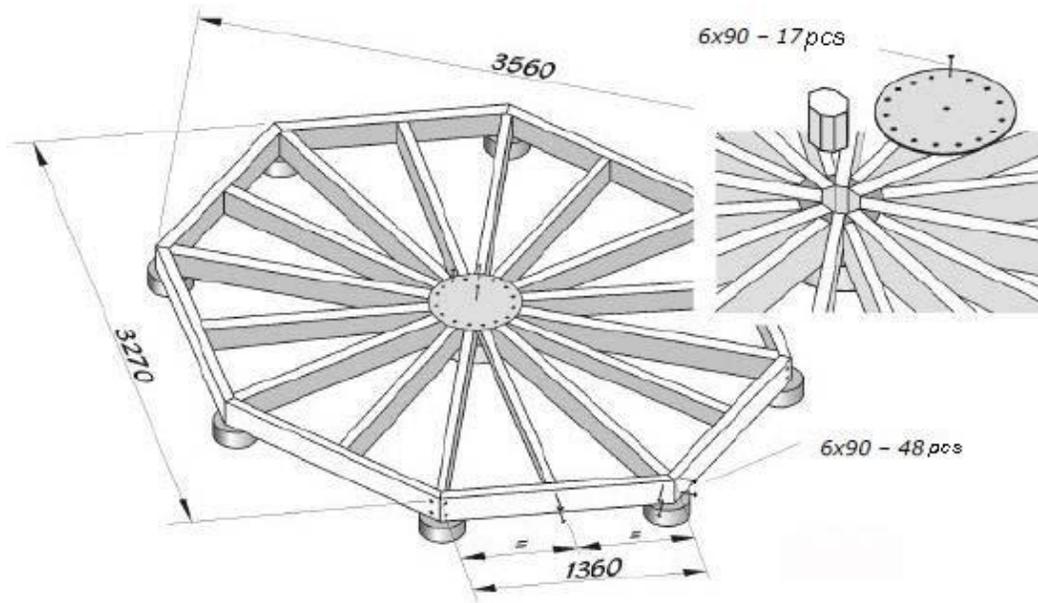

### Base structure

Place the parts of the base structure (50 x 100 impregnated) on the base structure (figure 1 is 6K and figure 2 is 8K) and fasten these to each other according to the figure.


Before and after installation, make sure that the measurements on the figure comply with actual measurements.

## Floor


Place the floor elements on the base structure (picture 3/6K and picture 4/8K) according to the shape of the base structure. Fasten the elements to the base structure using screws in the manner shown on the figure. It is advisable to drill holes for the screws beforehand.

Fasten the footing boards. Place the centre between the elements.

### Picture 3

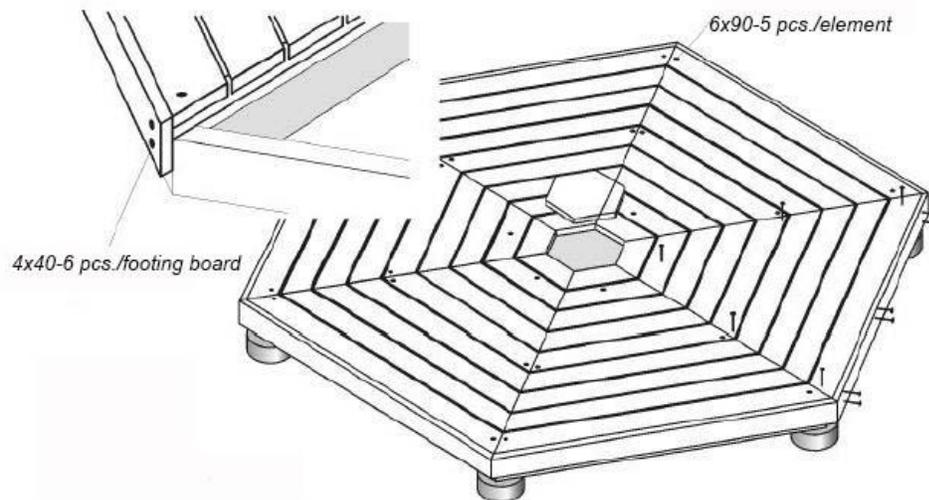

### Picture 4


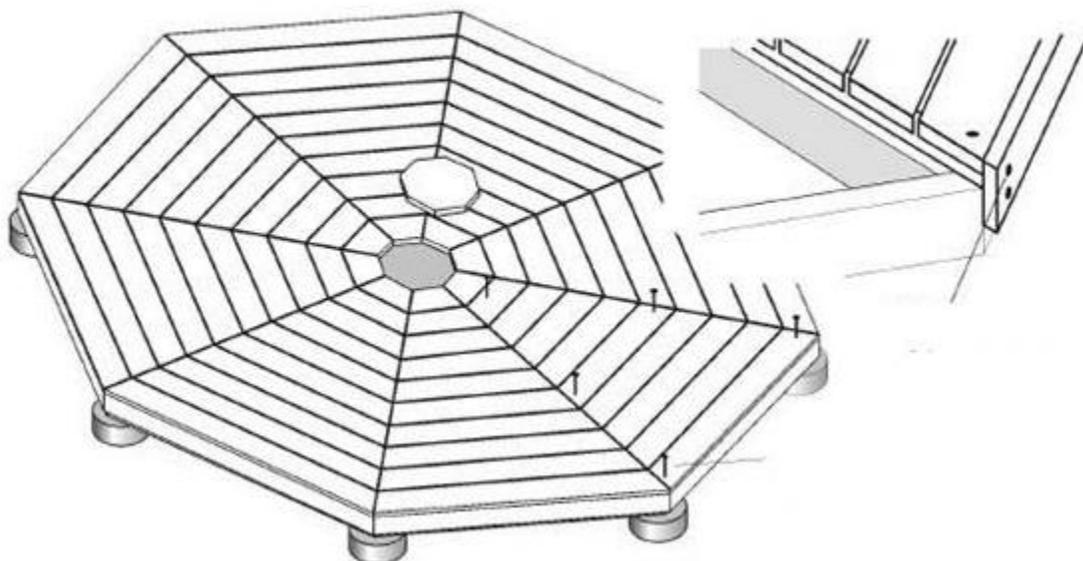


## Elements


The garden house consists of floor-, wall- and roof elements. The windows and door have been installed to the wall elements in the factory.

## Putting together the substructure

Begin installing the wall elements with the wall of your preference – keep in mind that now you also have to choose the places for openable windows and the wall with the door. Lift the first wall element onto of the base structure in a way that the wall panel remains outside of the footing board and the corners of the elements are in line with the connection of the floor (Picture 5). Support the first wall and place the next element next to the previous one. Check that the walls align well and fasten the walls to each other with screws from the outside (Picture 6) – do not fasten the walls to the floor just yet. When all eight/six walls have been put up and fastened to each other, check once more that the walls fit well both with the floor and each other, then fasten the walls to the floor with screws (Picture 7).

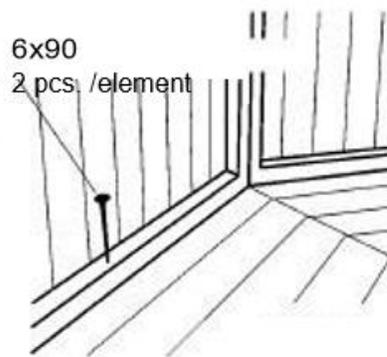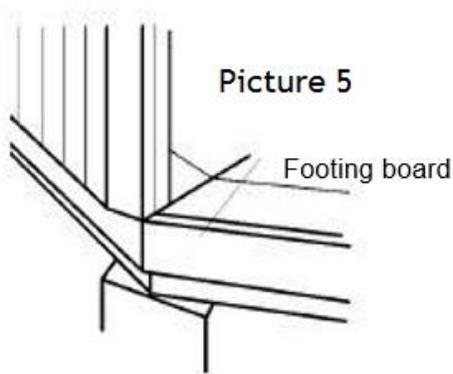

Picture 7

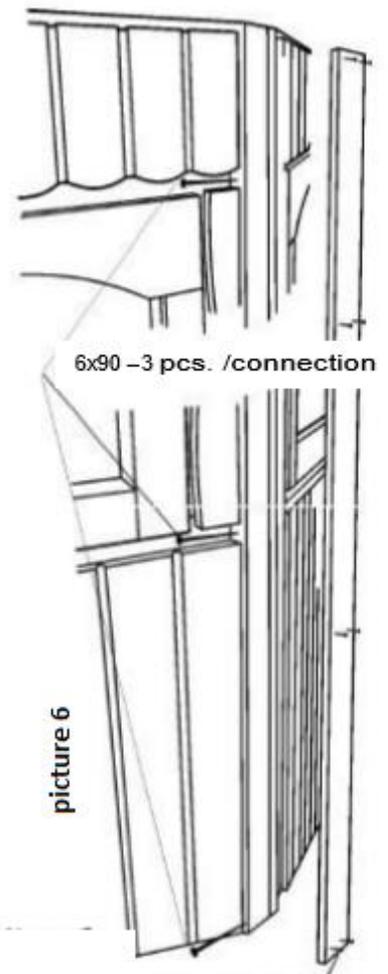

## Installing the roof



When installing roof elements, you need to use beams to support the walls (6K - 255 cm; 8K - 265 cm), these are used to support the top of the roof elements from the inside while they are being lifted onto the walls (Picture 8). Lift the first roof element onto the wall and support its top. Place the element in such a way that when being viewed from the inside, the corners of the roof element intersect with the corners of the wall elements and are straight with regard to the wall elements.

Fasten the roof element to the structure in

the centre by using screws (Picture 9). Lift the next roof element next to the previous one and support its top with the next beam. Check that the bottom line of the roof element is level from the outside and fasten the element with three 6 x 90 mm screws to the previous element (Picture 9).


Make sure that the first support beam remains still throughout the whole installation process and use the second beam to support the roof element that is being installed. You can leave the second support beam to support the fourth element and continue the installation process with a third support beam - this way the roof will be more secure throughout the instalment. When all elements have been fastened to each other, the positioning of the roof to the walls can still be adjusted. Fasten the roof elements to the corner post as shown on Picture 9.

Picture 8

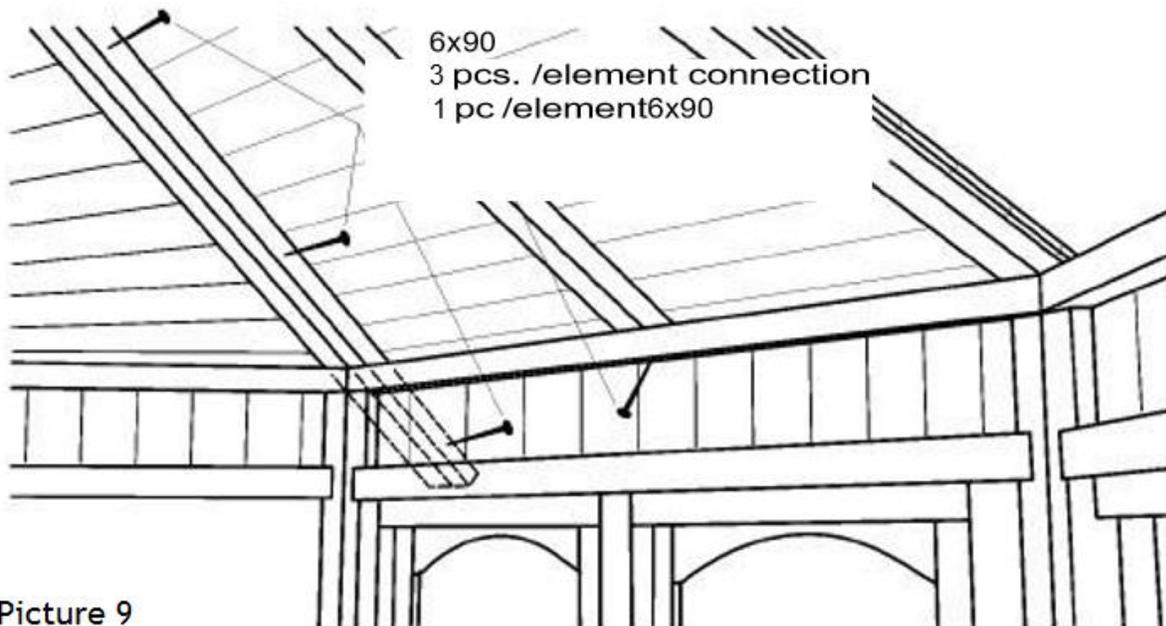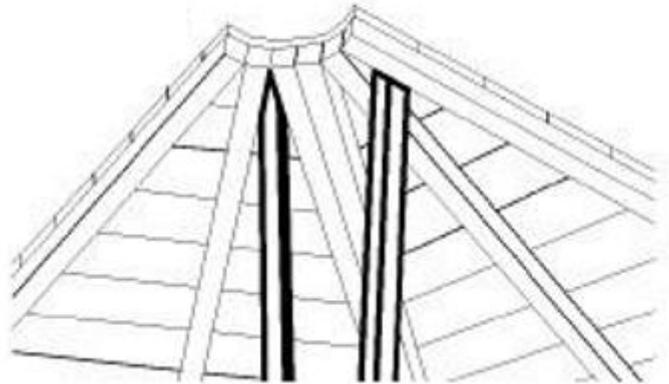


Picture 9

The roof end boards are fastened with screws to the ends of the roof elements (Picture 10).

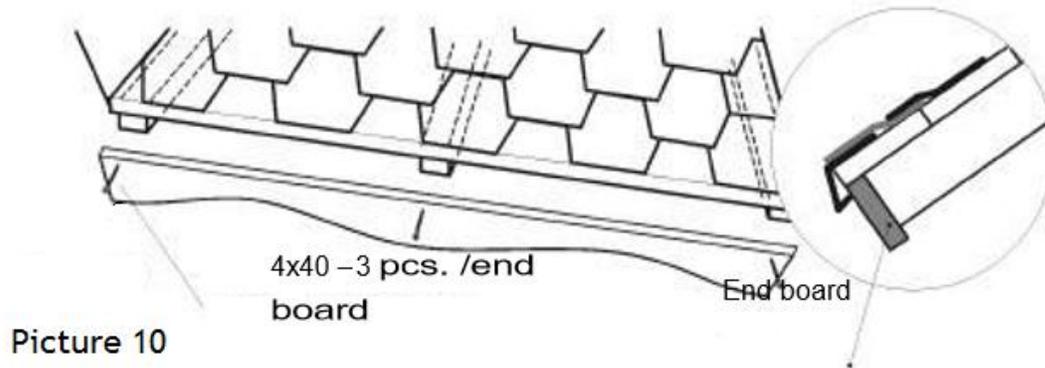


### Benches and bench supports

Install the supports of the benches on the bottom of the wall element at the connection of the two elements (Picture 11), fasten the supports to the wall element with 6 x 90 screws, drill holes for the screws previously, narrower supports (Picture 12) are installed on the edge board of the door. Find the correct position for the support with regard to the bench. Fasten the benches to the supports (Picture 11). In case of 8K - three benches have places for extensions, you may position these as you wish.

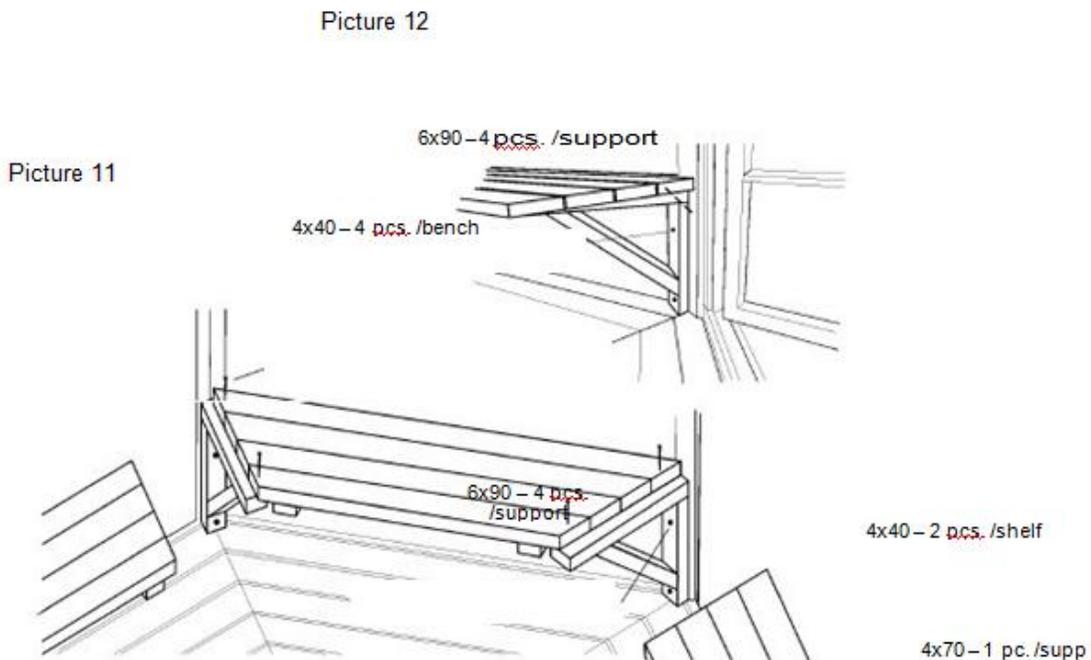


### Shelves and cover boards

Install the shelves on the interior walls of the garden house according to Figure 13. 6K – 5 pcs. and 8K – 7 pcs.

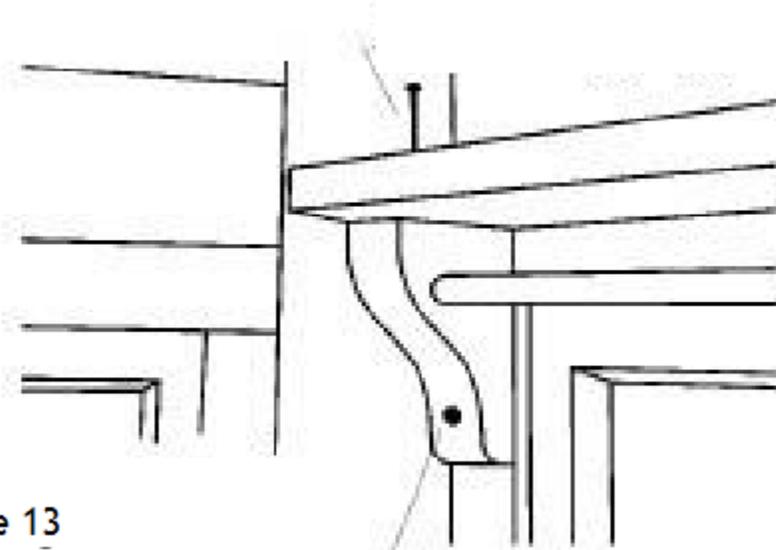

Picture 13

Fasten the cover boards included in the set between the ceiling and the wall element (Figure 14). Fasten slats to the connections of the wall elements with 8 3x30 screws.

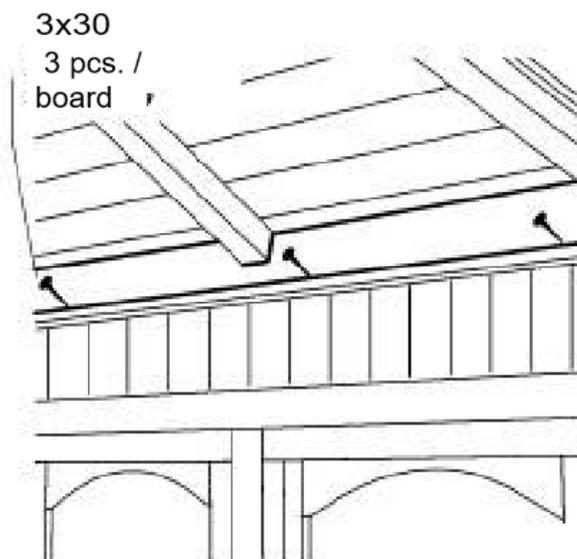

Picture 14



### Installing accessories

Fasten bolts and lattices to the opened windows of the garden house, 3 x 30 mm / 6pcs. / lattice. Place the lattice evenly with the window so that the screw would not break the window glass when being fastened (Picture 15), install door handles, lock and cover plates (NB! The smaller end of the decorative strip of the door will remain in the centre and the longer at the right) Picture 16, if necessary, adjust the doors and openable windows. A decorative strip is installed on the bottom edge of the windows (Picture 17) – before instalment, cover the strip with paint – cover boards will be fastened to the strip and in turn covered with a protective metal sheet (Picture 18).


Picture 15



Picture 16

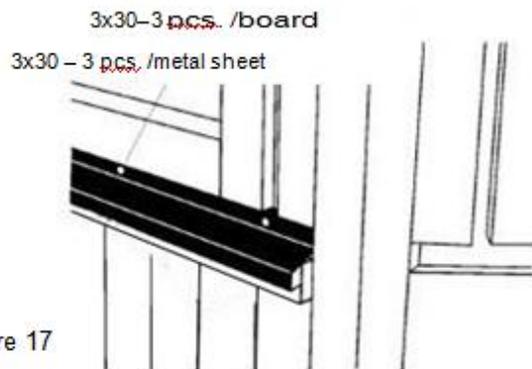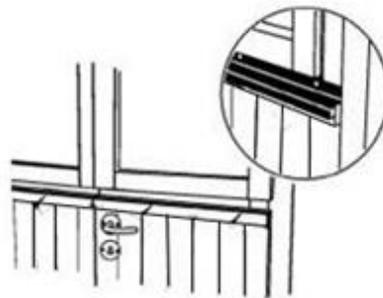

Picture 17

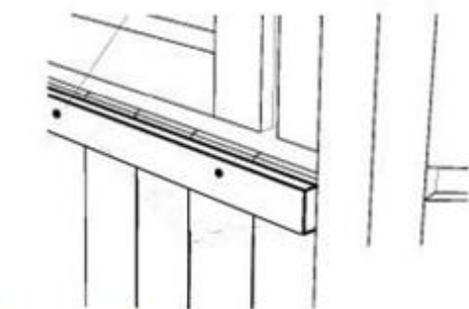

Picture 18

Congratulations! Your summer house has been installed! Please use the separate grill installation manual for BBQ huts and follow the respective instructions when installing roof shingles or treating your cabin with wood preservative.